


FLOOR OPENING PLAN VIEW

FIG: 1

THE TIMBER JOISTS & TRIMMERS ARE ALWAYS REQUIRED AS THEY FORM THE STRUCTURE TO FIX OUR STEEL APERTURES TO. EVEN WHEN FITTED IN A SHAFT.

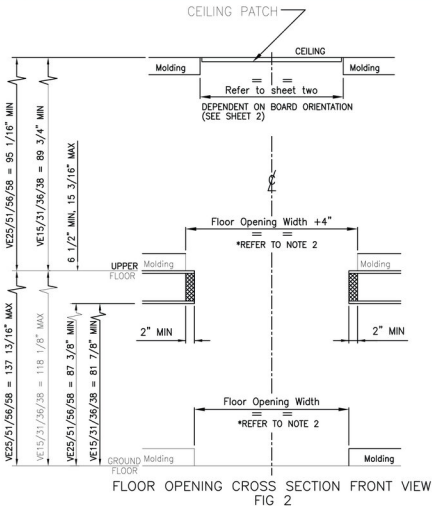

*Note 2: The Floor Opening length dimensions are the absolute minimum, with removing moldings, picture rails etc...

In the majority of cases it is recommended that the lift should be spaced away from the wall, the thickness of the moldings.

(i.e adding molding thickness to Floor Opening length.)